



Set Up Instructions

4 Point Kevlar net with ZIP straps

VBN1098W and VBN1098F

1. Make sure the winch is fully extended by turning the crank handle until it stops. Hook the spring clip in the net to the winch cable. (See Illustration 1)
2. At the opposite end of the net, hook the upper and lower “zip straps” to the J-Hooks. The strap on your net may require that the silver buckle be placed directly on the J Hook. There is a depression in the buckle that the J-Hook fits right into. Pull the straps to adjust the net position so the side dowel is straight up and down and positioned about a foot outside the court sideline. Trim excess strap with scissors and burn the ends of the straps slightly to prevent fraying. Note: Leave a foot or two of excess strap so your net can be adjusted to fit differing sleeve distances should you use your net on different courts. (See Illustration 2.) Excess strap can be looped through the quick links and tied off to get it out of the way.
3. Using the winch, tighten the top of the net putting plenty of tension on the top Kevlar cable. You will notice that the posts begin to deflect. (They are engineered to do so without harming them.)
4. Clip the rope ratchet to the lower net fixation ring on the winch and tighten the bottom of the net to desired tension. NOTE: Tensioning the bottom of the net is how you make the final net height adjustment. Tightening the bottom of the net pulls the net height down. Make your final net height adjustment by tensioning the bottom of the net more to lower net height or loosening the bottom tension a bit to raise it. (Illustration 3)

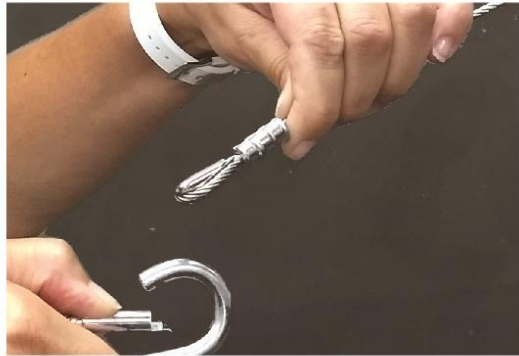


Illustration #1

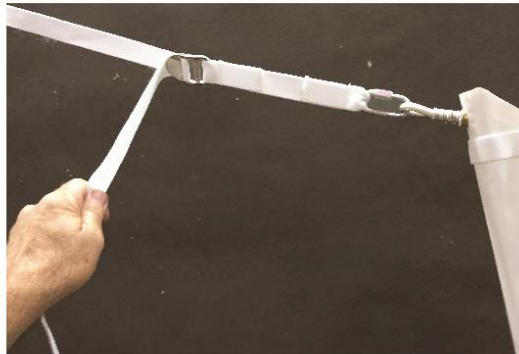


Illustration #2



Illustration #3