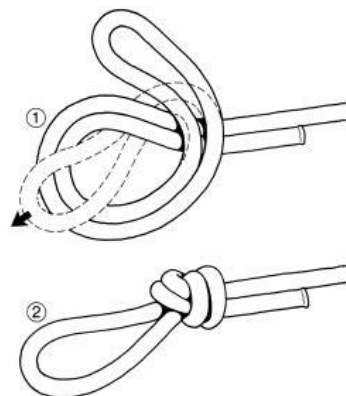


# Set Up Instructions

## VBN1098F and VBN1095F

### Volleyball Net

1. Identify the upper Kevlar cable by looking for the yellow fiber core. Put one end of this cable over the wheel on the non-winch post and put the loop over the shoulder bolt near the top of the post to secure it. (See Illustration 1 for proper loop knot)
2. Place the opposite end of the upper cable over the wheel at the top of the winch post and tie (use loop knot from Illustration 1) on one of the included Carabineer clips at a point that takes most of the slack out of the top cable but still allows easy hook up. BEFORE you do this loosen the winch so the strap is extended to a foot or so below the top of the post.
3. At the winch post end of the bottom net rope, install the included rope ratchet and clip to the D-ring strap
4. At the end post end of the bottom rope, tie on the other included carabineer clip and clip to the d-ring strap
5. Tighten the top of the net by turning the winch crank handle
6. Tighten the bottom of the net by pulling the rope through the rope ratchet.
7. Install 2 of the included Velcro side tensioners (4) to each side of the net by putting them through the hole in the side net band and then through the plastic buckle. Cinch then on the net dowel and place around the post. Pull to tighten the net and secure with the Velcro.



**ILLUSTRATION 1:** OVERHAND LOOP KNOT